 


QUICK START

Open the hook and loop fastener located under the Num. Press the button on top of the Nom's head and insert it into the opening of the Num with the face facing downward. When not playing, press the button again to turn off.

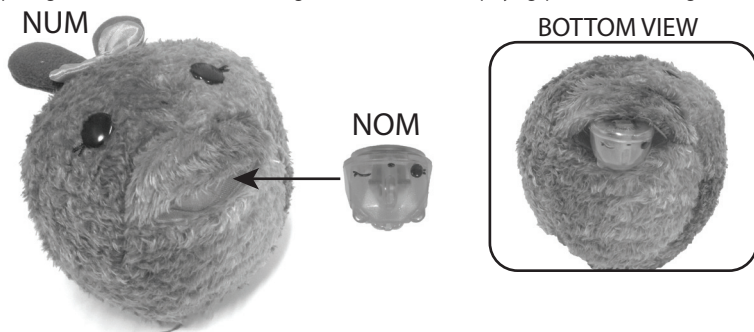

Illustrations are for reference only. Styles may vary from actual contents.

Note: Remove all packaging, including tags, ties and tacking stitches before giving this product to a child.

 
REMOVE THE BATTERIES BEFORE DISCARDING

An adult must remove the batteries and dispose of them at a designated collection point or recycling facility at the end of the battery life. Here's how:


REQUIRED TOOLS

(not included)


- Flat Head Screwdriver
- Hammer

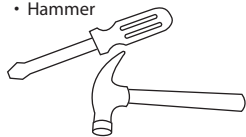

 NOTE: Batteries are not replaceable. Do not dispose of batteries in fire as they may leak or explode.

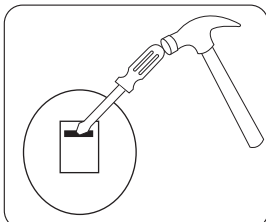

 Insert a flat head screwdriver into the slot on the door under the Nom. Carefully hammer the end of the screwdriver until the door opens.

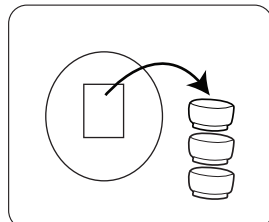

Remove the batteries and properly dispose. Do not burn or bury them.

⚠ WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



'Let's care for the environment!'

The wheellie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



0717-0-E/INT

www.numnoms.com
 © 2017 MGA Entertainment, Inc.
 NUM NOMS™ is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

16300 Roscoe Blvd.
 Van Nuys, CA 91406 U.S.A.
 (800) 222-4685

Printed in China

MGA Entertainment UK Ltd.
 50 Presley Way
 Crownhill
 Milton Keynes, MK8 0ES
 Bucks, UK
 + 0800 521 558

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com

Visit MGA.com to register your product and to enter our sweepstakes (No purchase necessary)