



4

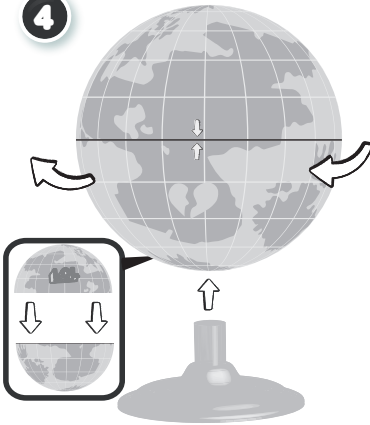

5



6

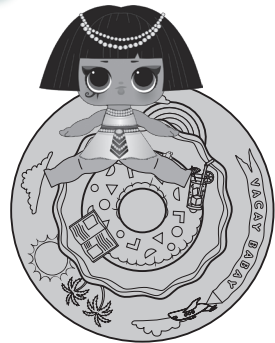

### COLOR -CHANGE

- Cold color change will start at approximately 59°F (15°C), but best results occur if the ice water is chilled to approximately 32°F (0°C).
- Warm color change will start at approximately 100.4°F (38°C), but best results occur if the water is approximately 104°F (40°C).
- Only certain dolls change color.
- Only certain dolls will change color in warm and cold water.
- Color change will only work on certain parts of the doll's body or accessories. Not all included accessories change color.
- If color change does not work properly or quickly, the temperature of the doll's body may be too close to the temperature of the water.
- Color change temperatures may vary according to weather conditions.
- The color-change effect of the doll's body has a lengthy, but limited lifespan.
- Color changing reveal illustrations are not meant to illustrate dolls color changing patterns as they vary. Illustration is for reference of process only.

### \* ⚠ WARNING

An adult must be present and supervise when placing the doll in warm water, as the water may be hot.

### IMPORTANT INFORMATION

- Before beginning, cover the play area to protect from possible water damage.
- Your doll will either spit, pee, cry or change color.
- For best results, fill the bottle and feed the doll two times.
- Do not place the doll in extremely hot water.
- Do not feed the doll extremely hot water.
- An adult must be present when children are playing with water.
- Do not store the dolls in direct sunlight for extended periods of time.
- Exposure to sunlight may deactivate color change feature.
- Squeeze out all water from the bottle and the doll after each use.
- Thoroughly drain the doll on a dry towel in a well-ventilated area after use and before storing.
- Air dry only. Do not place in the dryer or subject to excessive heat.
- Only one doll is included. Multiple shown for demonstration only.
- Globe will rotate while on stand.
- Globe separates into two pieces.



www.LOLsurprise.com  
©2021 MGA Entertainment, Inc.  
L.O.L. SURPRISE!™ and WORLD TRAVEL™ are trademarks of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

MGA Entertainment, Inc.  
9220 Winnetka Ave.  
Chatsworth, CA 91311 U.S.A.  
(800) 222-4685

MGA Entertainment UK Ltd.  
50 Presley Way, Crownhill  
Milton Keynes, MK8 0ES  
Bucks, UK  
+ 0800 521 558

MGA Entertainment (Netherlands) B.V.  
Baronie 68-70, 2404 XG Alphen a/d Rijn  
The Netherlands  
Tel: +31 (0) 172 758 038

Imported by MGA Entertainment Australia Pty Ltd  
Suite 2.02, 32 Delhi Road, Macquarie Park NSW 2113  
1300 059 676


The preferred method of contact for  
Customer Service is through our e-mail  
contact form at [www.mgae.com](http://www.mgae.com)

Printed in China  
0621-0-EINT

Please keep this manual as it contains important information.  
Illustrations are for reference only. Styles may vary from actual contents.



### ♥ BABY STEPS ♥

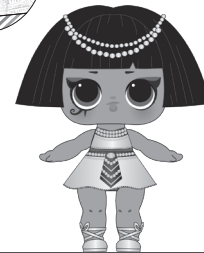

AGES 3+

ADULT SUPERVISION REQUIRED  
SKUs: 576006, 576013

⚠ **WARNING:**  
CHOKING HAZARD-Small parts.  
Not for children under 3 years.

