

COLOR -CHANGE

- Cold color change will start at approximately 59°F (15°C), but best results occur if the ice water is chilled to approximately 32°F (0°C).
- Warm color change will start at approximately 100.4°F (38°C), but best results occur if the water is approximately 104°F (40°C).
- Only certain dolls change color.
- Only certain dolls will change color in warm and cold water.
- Color change will only work on certain parts of the doll's body or accessories. Not all included accessories change color.
- If color change does not work properly or quickly, the temperature of the doll's body may be too close to the temperature of the water.
- Color change temperatures may vary according to weather conditions.
- The color-change effect of the doll's body has a lengthy, but limited lifespan.

***⚠ WARNING**
An adult must be present and supervise when placing the doll in warm water, as the water may be hot.

IMPORTANT INFORMATION

- Before beginning, cover the play area to protect from possible water damage.
- Your doll will either spit, pee, change color or change when viewed using 3D glasses/3D glasses piece.
- For best results, fill the bottle and feed the doll two times.
- Do not place the doll in extremely hot water.
- Do not feed the doll extremely hot water.
- An adult must be present when children are playing with water.
- Do not store the dolls in direct sunlight for extended periods of time.
- Exposure to sunlight may deactivate color change feature.
- Squeeze out all water from the bottle and the doll after each use.
- Thoroughly drain the doll on a dry towel in a well-ventilated area after use and before storing.
- Air dry only. Do not place in the dryer or subject to excessive heat.
- Only one doll is included. Multiple shown for demonstration only.
- Each doll will come with either the left or right side of 3D glasses or both sides. Collect them all to get all glasses parts.
- Use 3D glasses/3D glasses piece to reveal your dolls secret message.
- Use 3D glasses/3D glasses piece to see cup design and doll in 3D.
- LED Light Instructions: Connect light torch (handle/stand) to the ring light. Slide in a lens from your 3D glasses/3D glasses piece to create a spotlight for your doll.
- Only one doll includes a LED light.
- The included film cell will need to be inserted into the paper cardboard to view your movie.


IMPORTANT INFORMATION CONTINUED

- WARNING**
- 3D glasses/3D glasses piece are not meant to be used as sunglasses.
 - 3D glasses/3D glasses piece do not offer UV protection.
 - 3D glasses/3D glasses piece are not meant for direct obstruction of the sun.

BATTERY REPLACEMENT

An adult must install fresh alkaline batteries in your UV black light should the batteries need replacing. Here's how:

1. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover located under the light.
2. Install three (3) fresh 1.5V AG3 (LR41) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

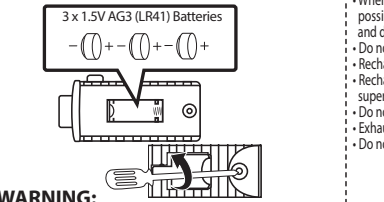

⚠ WARNING:
This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the battery type recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

♻ 'Let's care for the environment!'
The wheeie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

www.LOLsurprise.com
©2021 MGA Entertainment, Inc.
L.O.L. SURPRISE!™ and MOVIE MAGIC™ are trademarks of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

MGA Entertainment, Inc.
9220 Winnetka Ave.
Chatsworth, CA 91311 U.S.A.
(800) 222-4685

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill
Milton Keynes, MK8 0ES
Bucks, UK
+ 0800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404 XG Alphen a/d Rijn
The Netherlands
Tel: +31 (0) 172 758 038

Imported by MGA Entertainment Australia Pty Ltd
Suite 2.02, 32 Delhi Road, Macquarie Park NSW 2113
1300 059 676

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com

Please keep this manual as it contains important information. Illustrations are for reference only. Styles may vary from actual contents.



♥ BABY STEPS ♥



⚠ WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

AGES 3+
ADULT SUPERVISION REQUIRED
SKU: 576471

Printed in China
0321-0-E/INT

