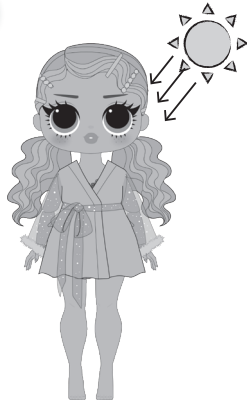
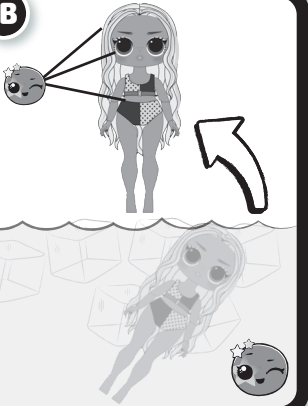




7A



B



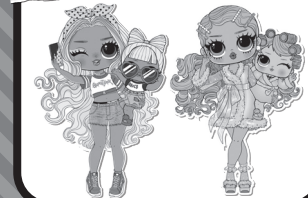
COLOR -CHANGE

- For cold color change, use ice water at approximately 32°F (0°C) for best results.
- Warm color change will start at approximately 100.4°F (38°C) but best results occur if the water is approximately 104°F (40°C).
- Not all included fashions or accessories change color.
- Extreme weather conditions may cause the color change pattern reveal upon arrival. To return it to its original color, place the doll in a room temperature area at approximately 68–77°F (20–25°C).
- If color change does not work properly or quickly, the temperature of the doll's hair may be too close to the temperature of the water.
- Color change temperatures may vary according to weather conditions.

- When removing the hands to dress doll, pinch the wrists' joints and gently pull. **DO NOT PULL FROM THE FINGERS.**

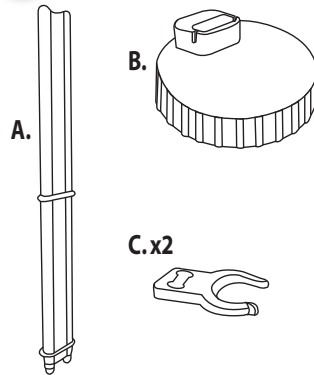
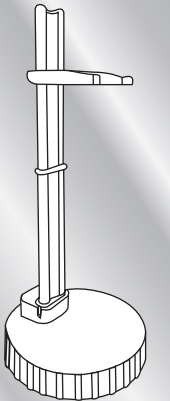
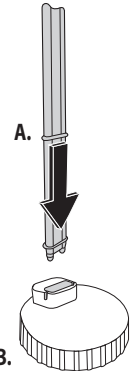
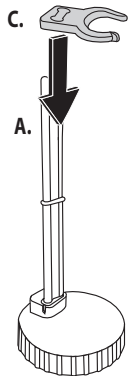
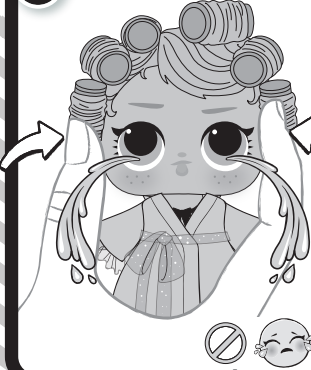
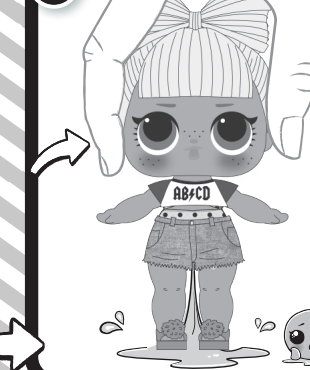


Imported by MGA Entertainment Australia Pty Ltd
Suite 2.02, 32 Delhi Road, Macquarie Park NSW 2113
1300 059 676

Printed in China
0222-0-E/IN

AGES 3+
ADULT SUPERVISION REQUIRED
EACH SOLD SEPARATELY
580485, 580492

⚠ WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

1**2****2A****2B****3****4A****4B****5**