



 
2021 COLLECTOR EDITION

Ages 6+
SKU: 576518
ADULT BATTERY INSTALLATION REQUIRED




BATTERY INSTALLATION

The batteries included in this set are for in-store demonstration. Before beginning, an adult must install fresh alkaline batteries. Here's how:

1. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover from under the base.
2. Install three (3) fresh 1.5V AAA (LR03) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

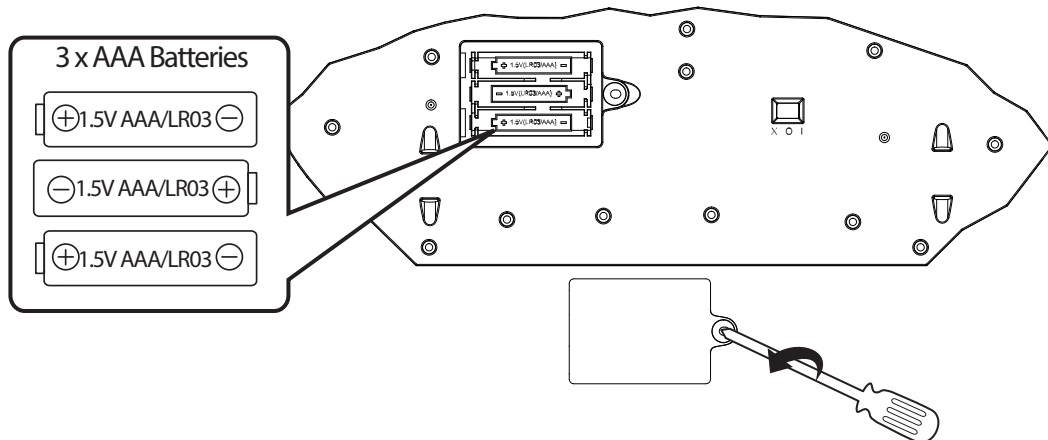

USING THE LIGHT-UP BASE

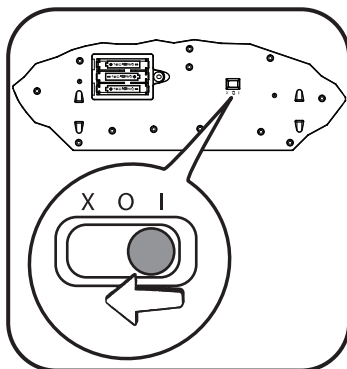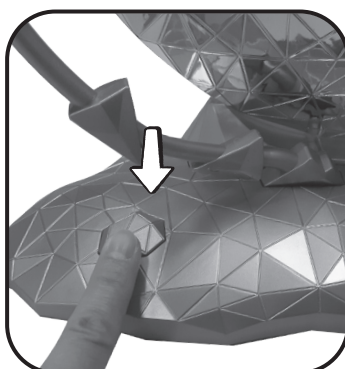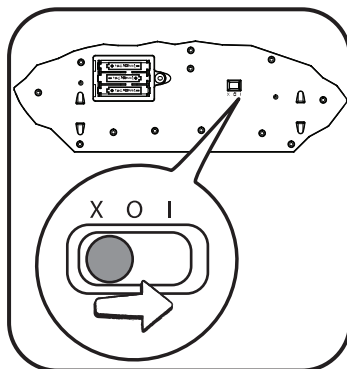   

Move the switch under the base from the TRY ME (X) position to the ON (I) position.

Press the button on the front of the base once to see twinkling lights. Press button twice to see pulsating lights. Press the button three times to leave lights on without twinkling or pulsating features.

After playing, move the switch under the base to the OFF (O) position.

IMPORTANT INFORMATION

- This collector edition doll is designed for display purposes. Handle with care during play to prevent damage to the doll and her accessories.
- Illustrations are for reference only. Styles may vary from actual contents.
- To remove the doll from the stand, carefully remove any packaging ties holding her in place.
- Turn the unit off after playing to conserve battery power.
- Function is limited in TRY ME mode. For maximum play, move the switch to the ON position.
- After either mode is selected, press button on base once to turn off lights.
- While in either mode, the lights on the base will go into sleep mode after 3 minutes to conserve battery power and to avoid any mis-press if turning to OFF mode after use.
- Once the button on the base is pressed after being in sleep mode, the lights will activate again.
- **WARNING: This toy produces flashes that may trigger epilepsy.**

SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the battery type recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.
CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'

The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste.

Take them to a designated recycling facility.

Please keep this manual as it contains important information.



0521-0-E/INT

Printed In China

www.LOLsurprise.com

©2021 MGA Entertainment, Inc.

L.O.L. SURPRISE™ and L.O.L. SURPRISE! O.M.G. OUTRAGEOUS

MILLENNIAL GIRLS™ are trademarks of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

MGA Entertainment, Inc.

9220 Winnetka Ave. Chatsworth, CA 91311
U.S.A.
(800) 222-4685

MGA Entertainment UK Ltd.

50 Presley Way, Crownhill, Milton Keynes,
MK8 0ES, Bucks, UK
+ 0800 521 558

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com

MGA Entertainment (Netherlands) B.V.

Baronie 68-70, 2404 XG Alphen a/d Rijn, The Netherlands
Tel: +31 (0) 172 758038

Imported by MGA Entertainment Australia Pty Ltd

Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676