

EN

AGES 3+
ADULT SUPERVISION REQUIRED
SKILL: 542629, 542636

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

WARNING

- ADULT SUPERVISION REQUIRED when children are playing with water.
- DO NOT allow children to play with water near any electrical source or apparatus.
- Keep out of reach of small children.

IMPORTANT INFORMATION

- Before beginning, cover the play area to protect from possible water damage.
- An adult must be present when children are playing with water.
- Do not place the doll in extremely hot water (over 109.4°F/43°C).
- Do not store the doll in direct sunlight for extended periods of time.
- Exposure to direct sunlight may deactivate color change feature.
- Thoroughly drain the doll on a dry towel in a well-ventilated area after use and before storing.
- Air dry the doll only. Do not place in the dryer or subject to excessive heat.

COLOR-CHANGE

- Your doll has a unique water feature and will change color in cold water.
- Color change will start at approximately 59°F (15°C), but best results occur if the ice water is chilled to approximately 32°F (0°C).
- If color change does not work properly or quickly, the temperature of the doll's body may be too close to the temperature of the water.
- Color change temperatures may vary according to weather conditions.
- The color-change effect has a lengthy, but limited lifespan.
- Extreme weather conditions may cause the color change pattern to reveal upon arrival. Place the doll back into room temperature 68-77°F (20-25°C) for the original color.

ACCESSORY TIPS

- WINGS:** For Fairy Fae and Rainbow Q.T.: First, loop one arm into one of the bands on the wings. Then, bring the other band around the other arm to secure the wings.
- TAIL:** For Foxy Grrt: Secure the tail before putting it on your doll. First, latch the end of the belt with the circle to the other end with the peg. Pull the peg through the hole to secure it closed. Then, slide it onto your doll.
- If you lose your provided key: use a pen to put into the keyhole and move horizontally to unlock the ball.

Please keep this manual as it contains important information.
Illustrations are for reference only. Styles may vary from actual contents.

The preferred method of contact for Customer Service
is through our e-mail contact form at www.mga.com

© 2015 MGA Entertainment, Inc. L.O.L. SURPRISE™ and EYE SPY SERIES™ are trademarks of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.
Printed in China

US/CA - MGA Entertainment, Inc., 18220 Wilshire Ave., Chatsworth, CA 91311, U.S.A. Tel: +1 (800) 233-6885
www.mga.com/contact

UK - MGA Entertainment UK Ltd, 50 Presley Way, Crowthill, Milton Keynes, MK9 0ES, Bucks, UK.
MGA Consumer Services (UK) Box 2040 Heckley, Essex, SS5 4BW Tel: 0800 521 558
Email: ukconsumerservices@mga.com

EU - MGA Entertainment (Netherlands) B.V., Banier 18-20, 2406 RG, Alphen aan den Rijn, The Netherlands
Tel: +31-172-758-010 Email: klantenService@mga.com

AU/INZ - Imported by MGA Entertainment Australia Pty Ltd, Suite 5.05, 37 Collyer Road, Macquarie Park NSW 2113, AU.
Tel: 1 300 050 626
Email: au-eu@mga.com

MGA

www.lol-surprise.com 0325-1-E/INT

LOL
SURPRISE!
EYE SPY SERIES™



