Conforms to ASTM D-4236

Read and follow instructions and safety quidelines before use.



UNDER 8 YEARS.

 ADULT SUPERVISION REQUIRED. NOT SUITABLE FOR CHILDREN

IMPORTANT INFORMATION

Please keep this manual for reference as it contains important information.

- Do not use any items or accessories which have not been supplied with the set or recommended in the instructions for use with this kit.
- In case of injury, always seek medical advice.
- Children's abilities vary, even within age groups. Supervising adults should use these instructions and exercise discretion as to which activities are suitable and safe for them.

Positive Polarity

- Each set makes one miniature item.
- Do not expose to moisture of any kind. Do not submerge in water. Turn off light when not in use to preserve battery life.

FOR SUNNY MARQUEE PACK

AWARNING

- **INGESTION HAZARD**: This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
 A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.


BATTERY SAFETY

- · Remove and immediately recycle or dispose of used or expired batteries according to local regulations and keep away from children. DO NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Only use battery type LR44 or AG13 with a nominal battery voltage of 1.5 volts.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 58°C (136.4°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not short-circuit batteries.
- . Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries • Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to
- Remove rechargeable batteries before recharging and only recharge batteries under adult supervision.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

BATTERY REPLACEMENT

An adult must install fresh alkaline batteries in the unit should the batteries need replacing. Here's how:

- 1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from under the rear bumper or the top of the
- 2. Install three (3) 1.5V AG13 (LR44) alkaline batteries (included) into the light, making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
- 3. Replace the compartment cover and tighten the

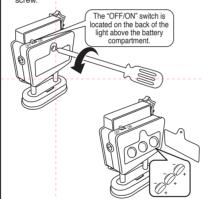

SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the battery type recommended for the unit.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.

This product contains a button cell battery. A button cell battery can cause severe the body. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries niight have been swai inside any part of the body, seek immediate medical attention.

IMPORTANT NOTES ABOUT BUTTON BATTERIES

- burns and potential perforation of the esophagus.
- 24-hour Poisons Information Centre on 13 1126 (Australia)/ your local emergency
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not
- Adults shall tell potential users about the risk of button batteries and keep their children. away from button cell. Adult supervision is required.

other household waste.

Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

 
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and).
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

WARNING:

or fatal injuries in as little as two hours if it is swallowed or placed inside any part of away from children. If you think batteries might have been swallowed or placed

- WARNING KEEP BATTERIES OUT OF REACH OF CHILDREN
- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical
- If you suspect your child has swallowed or inserted a button battery immediately call the services for fast, expert advice.
- Dispose of used button batteries immediately and safely. Flat batteries can still be

'Let's care for the environment!'







TAP THE RECIPE CARD







appearance are the property of MGA.





Protected by at least U.S. Patent Nos.: 11.850.533, 11.969.667, 11.992.786 as well as international patents (AU Patent No. 202315859, EU Patent No. 015033318-0001, GB Patent No. 6308268), Other U.S. and international patents pending.

TOYTAP™ with NFC is compatible with smartphones with built-in Near Field Communication (NFC) function (each sold separately). TOYTAP™ functionality may vary per game. System and/or game may be required to use TOYTAP™ functionality. Read instructions at mgae.com before use.

Printed in China

US/CA - MGA Entertainment, Inc. 9220 Winnetka Ave. Chatsworth, CA 91311, U.S.A. Tel: +1 (800) 222-4685 • www.mgae.com/contact





MAKE IT MINI

SPACES



The preferred method of contact for Customer Service is through our e-mail contact form a www.mgae.com

Please keep this manual as it contains important information. Illustrations are for reference only Styles may vary from actual contents.

547426NFC, 595731NFC





