



WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

SKU: 252566

ADULT SUPERVISION REQUIRED

CONTENTS

A. King Chrome

B. 1 Missile

C. 1 Blaster

Please keep this manual as it contains important information.
Illustrations are for reference only. Styles may vary from actual contents.

© 2026 MGA Entertainment, Inc. ARMORSAURS™ is the trademark of Daewon Media Co., Ltd. used under license. All other trademarks, names, characters, likenesses, images, slogans, and packaging appearance, not otherwise owned, are the property of MGA.

Printed in China.

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com

US/CA - MGA Entertainment, Inc. 9220 Winnetka Ave, Chatsworth, CA 91311, U.S.A.
Tel: +1 (800) 222-4685

www.mgae.com/contact

UK - MGA Entertainment UK Ltd. 50 Presley Way, Crownhill, Milton Keynes, MK8 0ES, Bucks, UK.
MGA Consumer Services

P.O. Box 2040 Hockley, Essex, S55 4BF

Tel: 0800 521 558

E-mail: ukconsumerservices@mgae.com

EU - MGA Entertainment (Netherlands) B.V. Baronie 68-70, 2404 XG, Alphen a/d Rijn, The Netherlands

 
 
Tel: +31-172-758-010

E-mail: klantenservice@mgae.com

AU/NZ - Imported by MGA Entertainment Australia Pty Ltd. Suite 5.05, 32 Delhi Road, Macquarie Park NSW 2113, AU.

Tel: 1 300 059 676


E-mail: au-sales@mgae.com

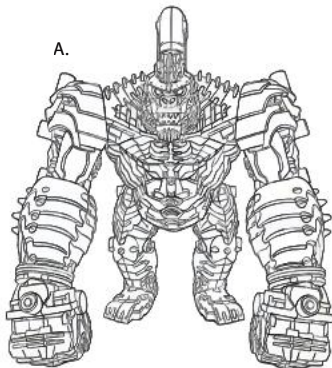

0326-0-E


GATLING BLASTER ATTACHMENT!

 - The Gatling Blaster can attach to multiple ports throughout the body.

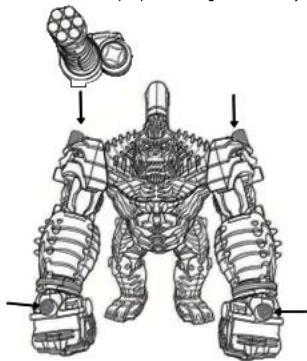

Left side

 Right side

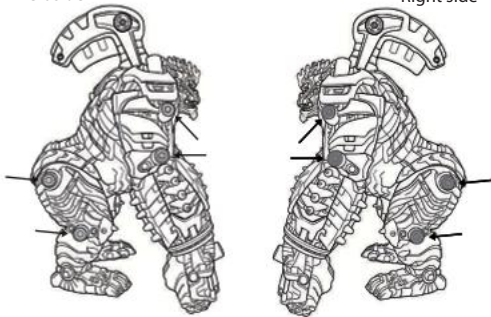


IMPORTANT INFORMATION

- Colors and illustrations are for reference only. Styles may vary from actual contents.
- Do not expose the action figure to moisture of any kind. Do not submerge in water.
- Wipe the action figure with a damp cloth, if needed. Cloth not included.

GETTING STARTED!


SWITCH THE POWER BUTTON
TO THE ON (I) POSITION.

 MAKE SURE TO TURN IT OFF (O)
WHEN FINISHED PLAYING TO
PRESERVE THE BATTERY LIFE.

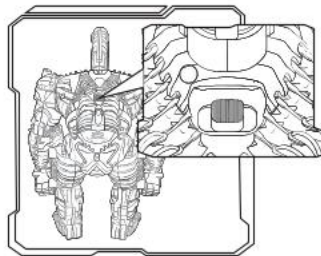

LIGHTS AND SOUNDS!

 
- Press the chest area of the figure to activate lights and sounds.

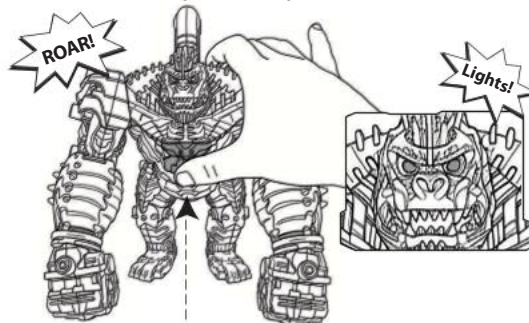

BATTERY REPLACEMENT

It is recommended that an adult install fresh alkaline batteries should unit need replacing. Here's how:

 1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the bottom of the vehicle.
2. Install three (3) AG13/LR44 alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

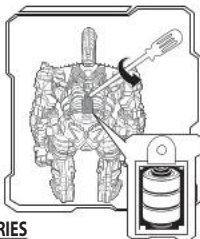


IMPORTANT NOTES ABOUT BUTTON BATTERIES

- **WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN**
- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If in Australia and you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 1126 (Australia)/ your local emergency services for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Adults shall tell potential users about the risk of button batteries and keep their children away from button cell. Adult supervision is required.

BATTERY SAFETY

 - Remove and immediately recycle or dispose of used or expired batteries according to local regulations and keep away from children. DO NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Only use battery type LR44 or AG13 with a nominal battery voltage of 1.5 volts.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 58°C (136.4°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not short-circuit batteries.
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- If using rechargeable batteries, remove rechargeable batteries before recharging and only recharge batteries under adult supervision.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Batteries should only be replaced by an adult.




⚠ WARNING


INGESTION HAZARD: This product contains a button cell or coin battery.
DEATH or serious injury can occur if ingested.
A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
KEEP new and used batteries **OUT OF REACH OF CHILDREN**
Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



 
MISSILE LAUNCH!

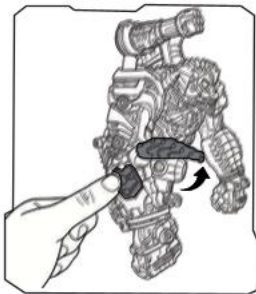

 
Press the button on the arm to open missile launcher.

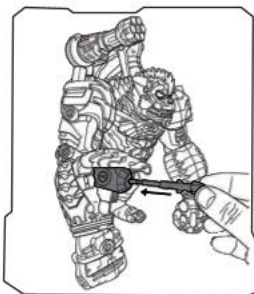

Load the missile into the launcher.

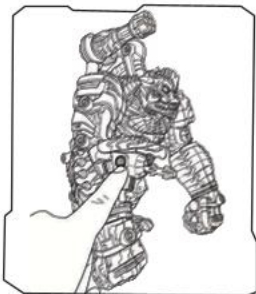 

 Press the button on the launcher to release missile.

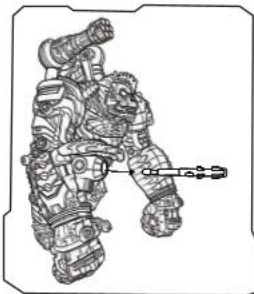

Launch!

ARM SWING!



Hold on to the handle and press the button to swing arms and activate lights and sounds.



Release the handle to swing arms downward.